

# **M Pro Set Up**



# Parts & Accessories

## 1. Kiosk Case

- a. M Pro Head
- b. Base Plate
- c. Printer Plate
- d. 3 Pieces- Body
- e. Bolt/wrench bag
  - i. 6 Large Bolts
  - ii. 4 small bolts
  - iii. 2 hand screw bolts
  - iv. Two sizes of wrenches



## 2. Umbrella


## 3. Supply Box

- a. 2 extension cords
- b. Splitter
- c. Flash and flash stand
- d. 2 Gaff tapes
- e. Table cloth
- f. Tool box/ Biz cards
- g. Cord cover box
- h. Emergency Back up kit



## 4. Printer Box



- a. Printer
- b. Printer tray
- c. 2 rolls of paper
- d. 2 rolls of Ink
- e. Printer to USB A cord
- f. Printer power cord

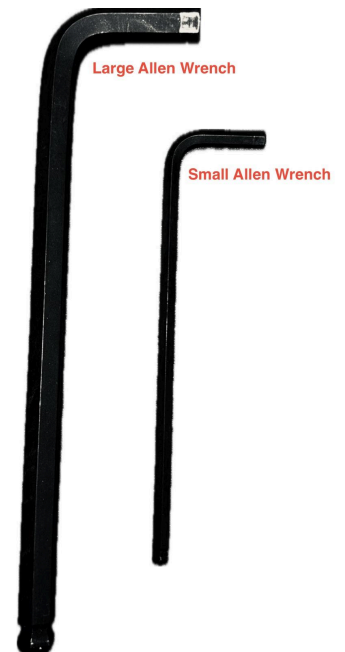

# Assembly Instructions

(Set up needs approximately 9ftx9ft)

1. Open your kiosk case and remove the 3 pieces of the body and bolt bag. Set them to the side.
2. Grab the base plate as well as the two body pieces for both the kiosk and the printer tray. (printer tray body piece has two cut outs, the kiosk piece only has one.)
3. Flip all pieces upside down to assemble as shown here —>
4. Grab 4 large bolts and your large sized allen wrench, attach the base plate to the pieces using the holes shown in this photo. —----->
5. Once the bolts have been tightened, flip the base upright. Now you're going to grab the second piece of the kiosk body, set it inside of the bottom piece.
6. Next, grab the 4 small bolts from your bag, and your small allen wrench. Attach 2 bolts to each side.

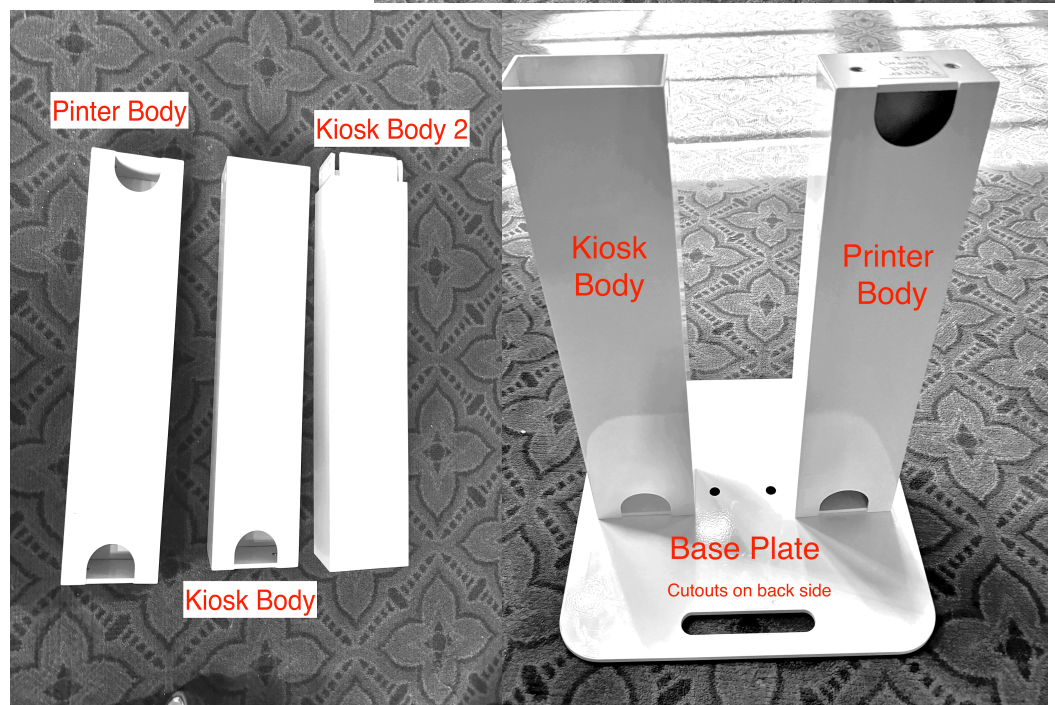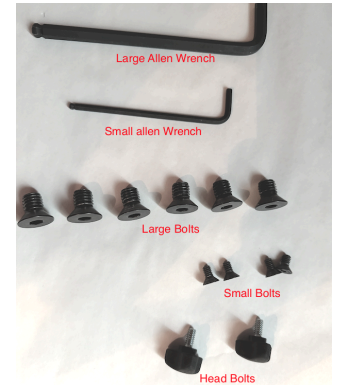

7. Locate the printer shelf, Flip it to the side where the bolt hole “wells” are facing upward. Grab your last two large bolts, and your large allen wrench. Tighten the bolts down into the shelf.

8. Attaching the head.

a. Grab your bolt bag, and locate the final two bolts.

These will not require an allen wrench, you can tighten them with your hands.


b. Carefully lift the head from the kiosk case, and set it on top of the Kiosk Body. While stabilizing the head, twist the knob on the door to open it. There will be two holes exposed, add the bolt and tighten them to secure the head.

9. Open the printer box, remove the two cords. One of them is for power, the other plug into the printer and has a USB on the end. Starting from the top hole of the printer stand body, feed the two cords down and through the bottom. Plug them into the printer and set aside.

10. Running the cords from the head

a. Gently untangle the cords in the head. From the inside, run the main power cord all the way down to the bottom of the kiosk body.

b. Find the printer cord, run it all the way down the kiosk body, connect it to the printer cord that is located in the printer body. This will sit on the base plate.

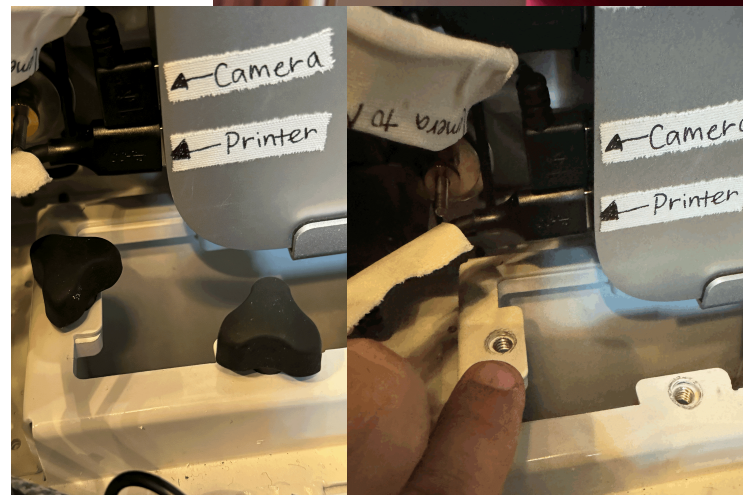

C. Run the flash power cord, and the sync cord up through the top of the head. (there's a small square cut out that you can feed these through)

11. Power on the Mac and the Ipad

12. Attach the flash stand and flash on top of the kiosk. There is a small hole near the center of the kiosk head. Feed the bolt through first, then attach the pole. Once the pole is attached, set the flash onto the pole and tighten the screw on the side. Then attach the umbrella.


13. Using the small keyboard and the back monitor- power up the Luna display on the back monitor, then open the photo booth software, the print server.

14. Open luna display on the Ipad, and bring the photo booth software screen to the Ipad.

15. Connect the Mac (back monitor) to the hotspot on the Ipad.

16. Clean up the cords and your area.

17. Take a test shot.

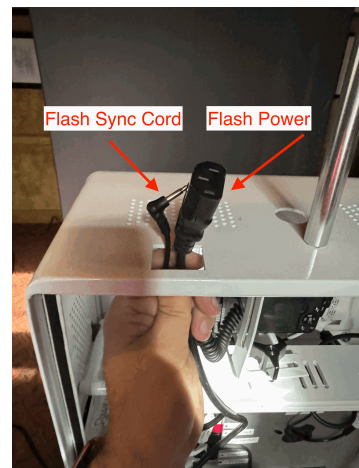

**\*\* To view specific details regarding the software set up, please review the videos posted on [www.smashbooth.net/team/](http://www.smashbooth.net/team/) , under the set up tab, M.Pro set up guide.**



Monitor Power Plug-in

Keyboard Mouse









Connected


Your password is required to  
log in

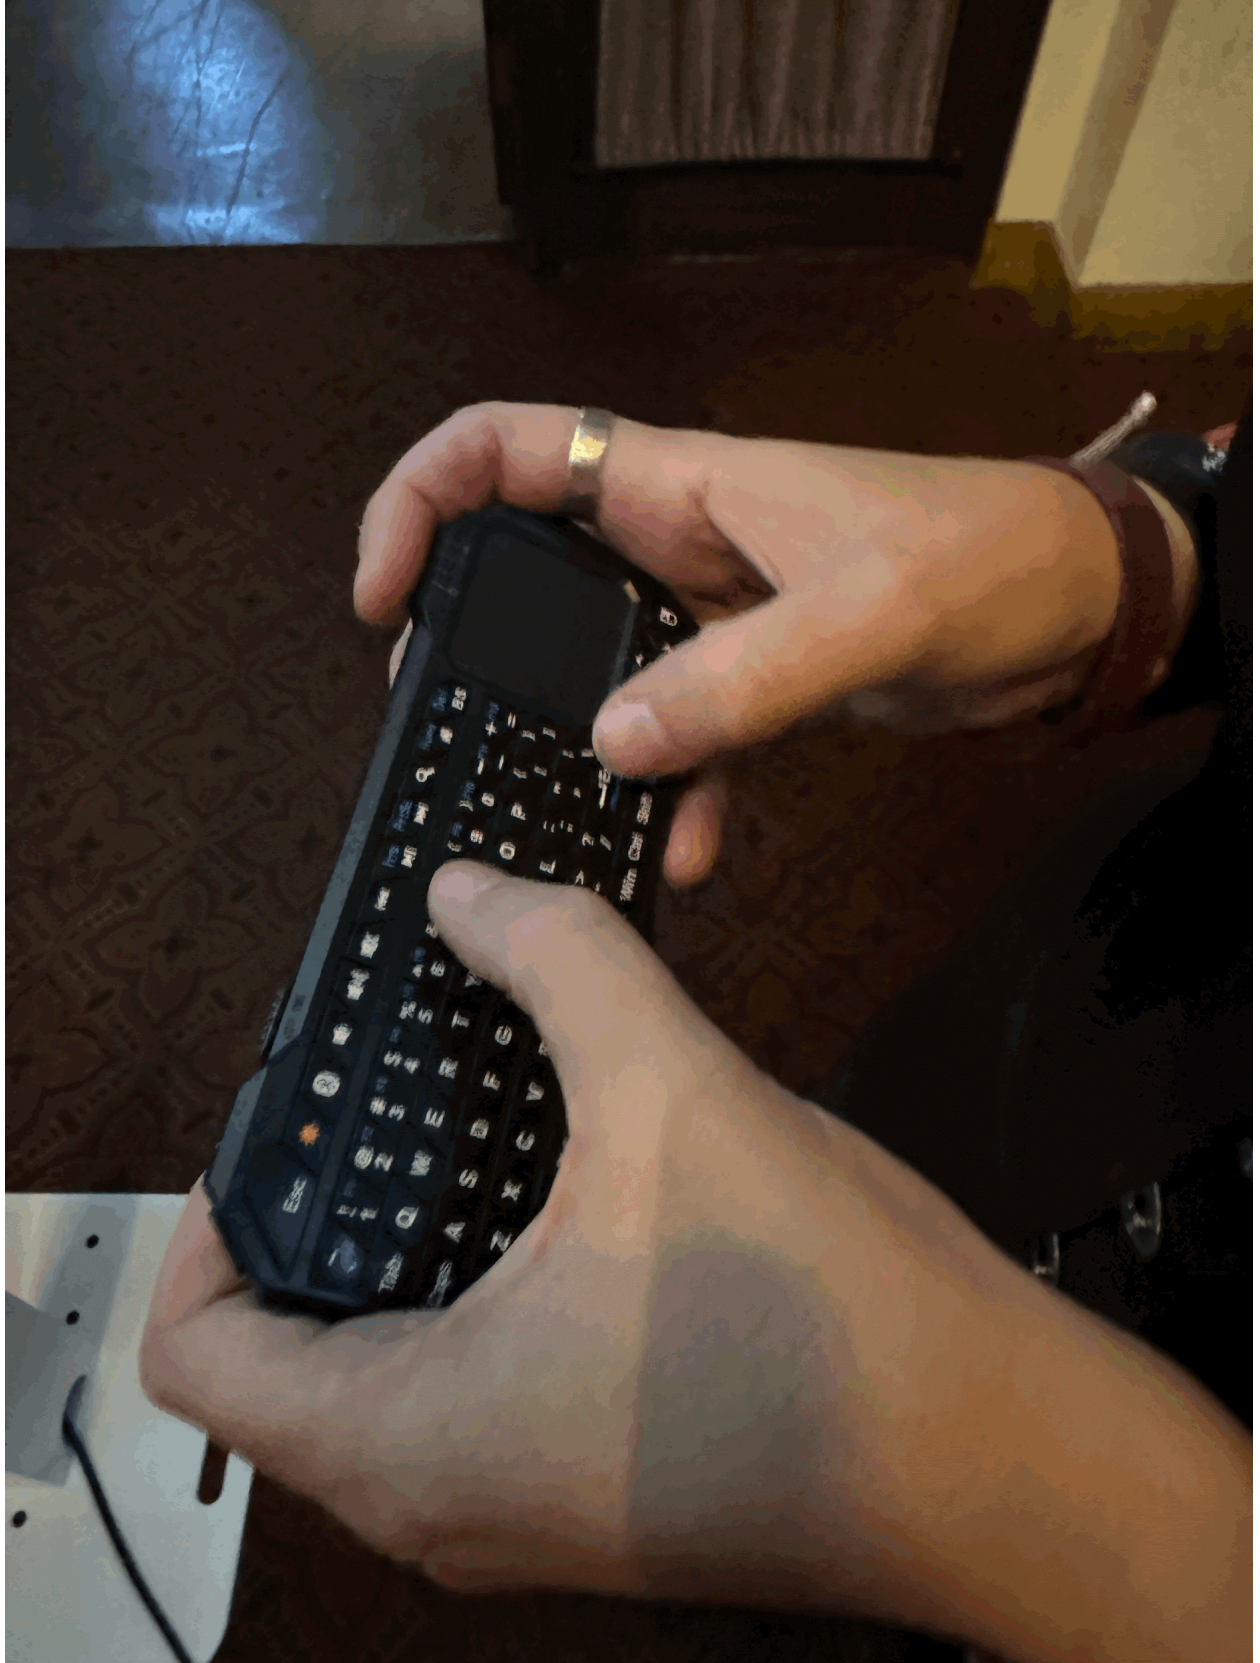





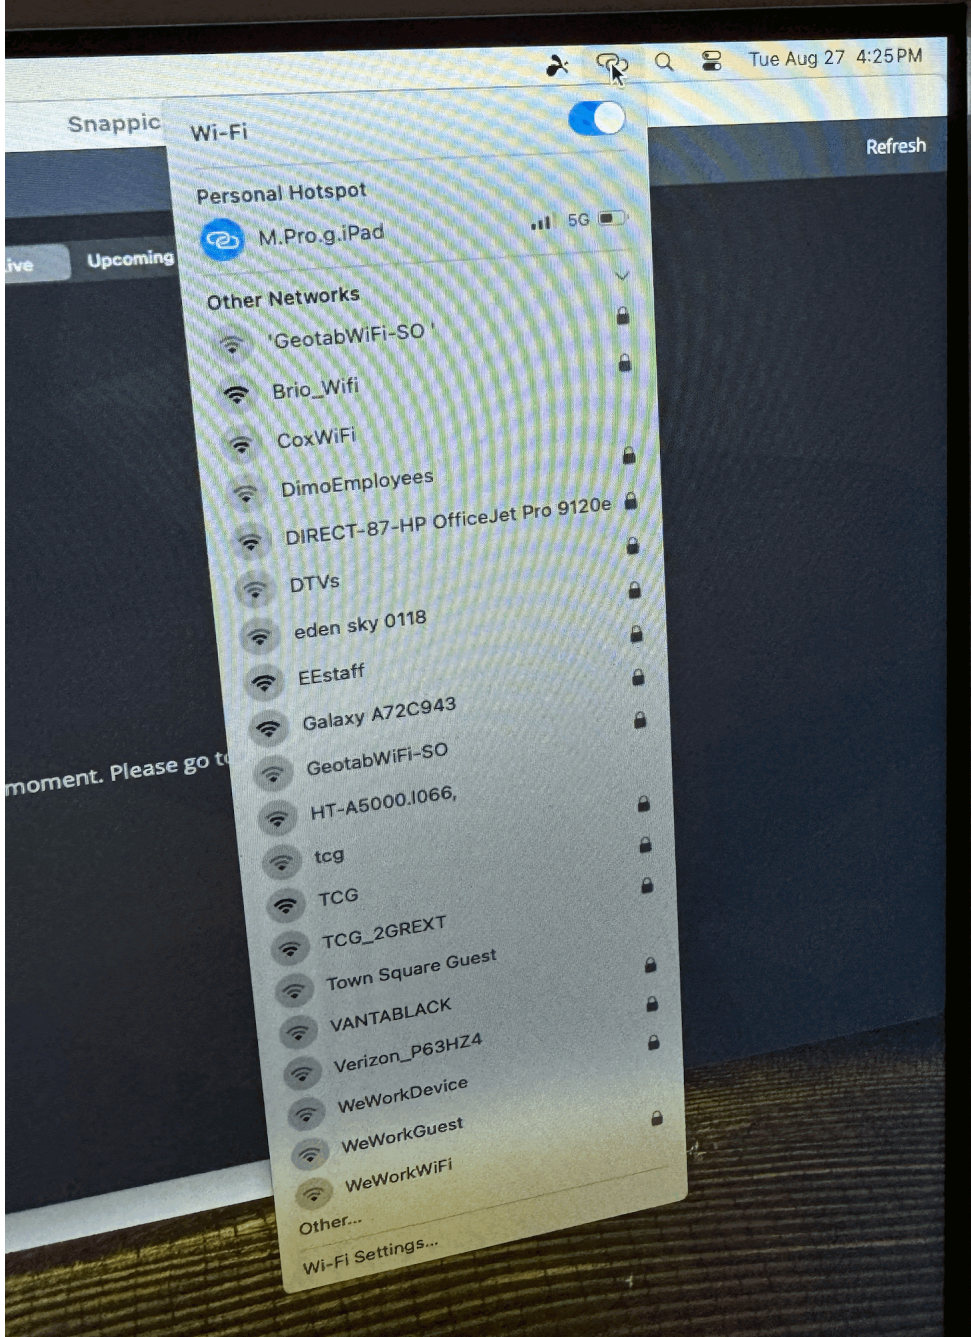

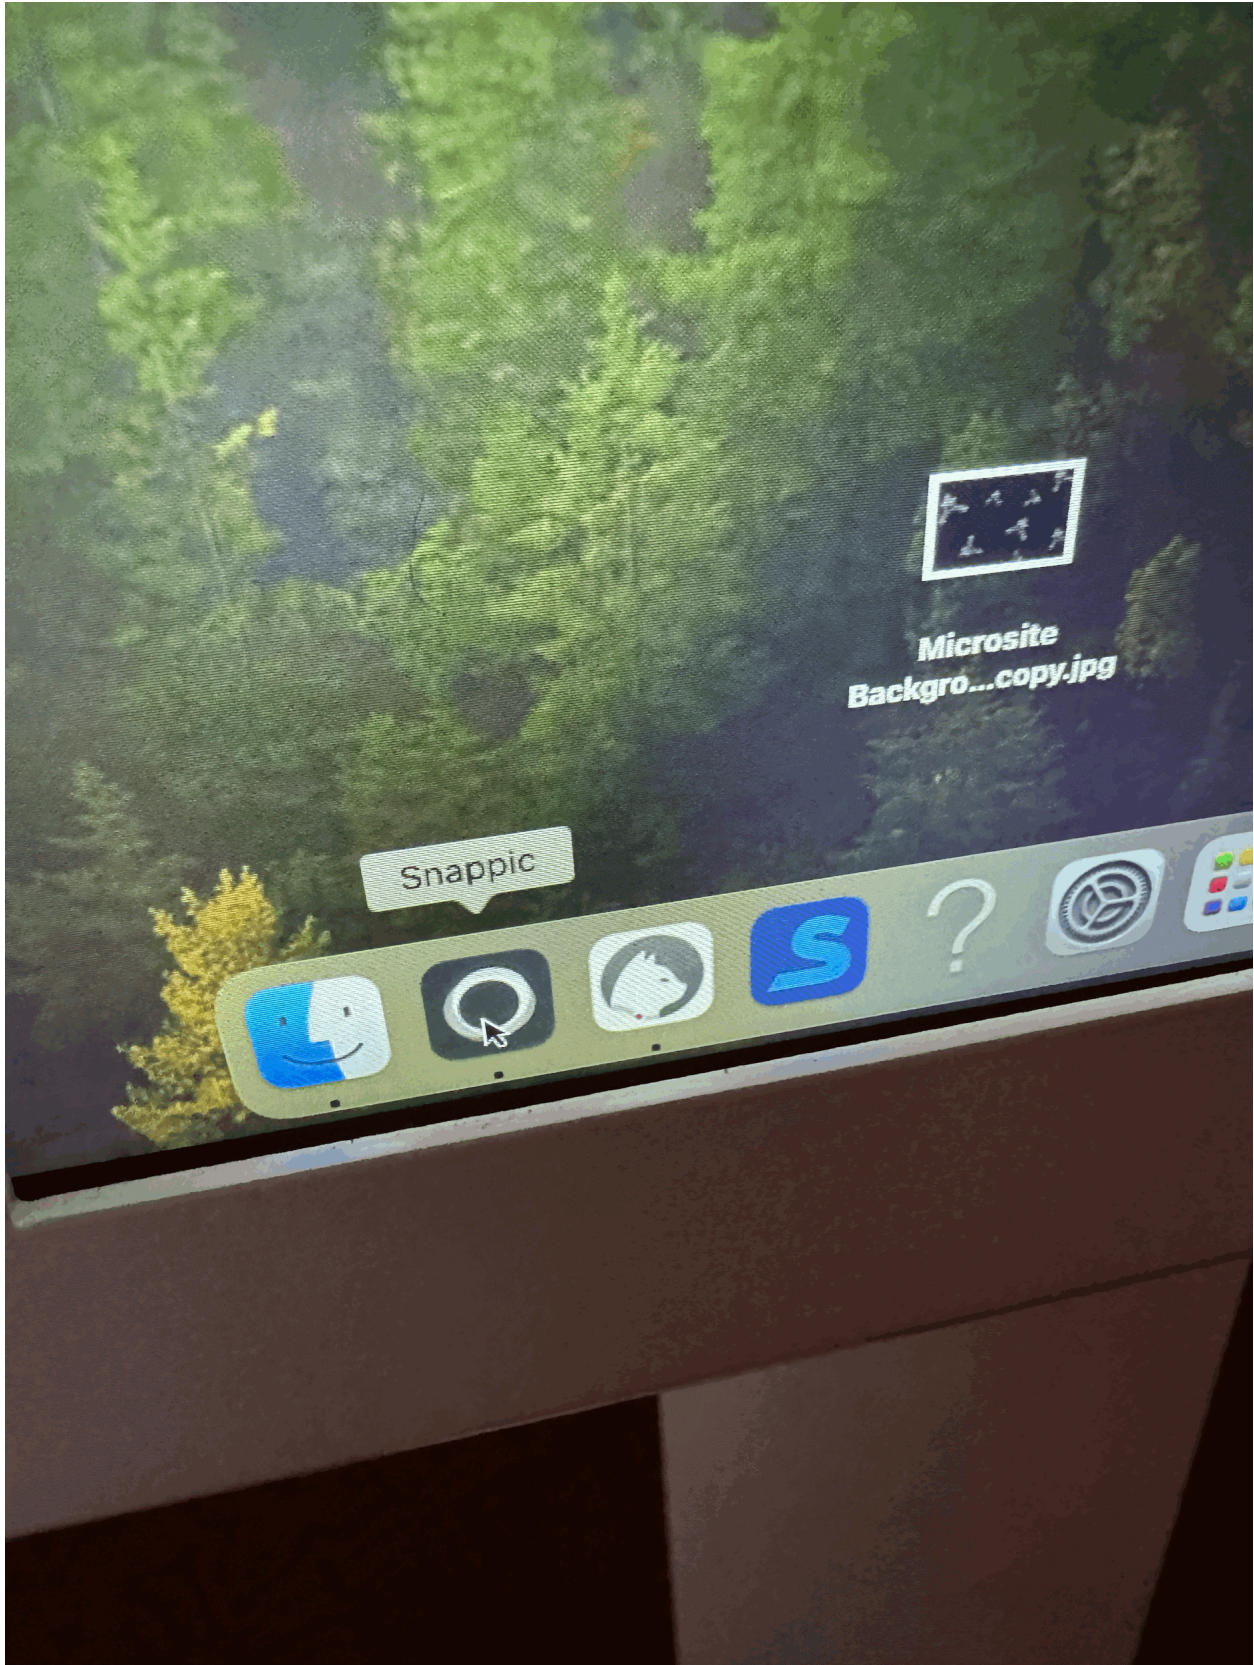



Microsite  
Backgro...copy.jpg

Luna Display



